


4

3

2

1

ZONE	REV	DESCRIPTION	DATE	APPROVED

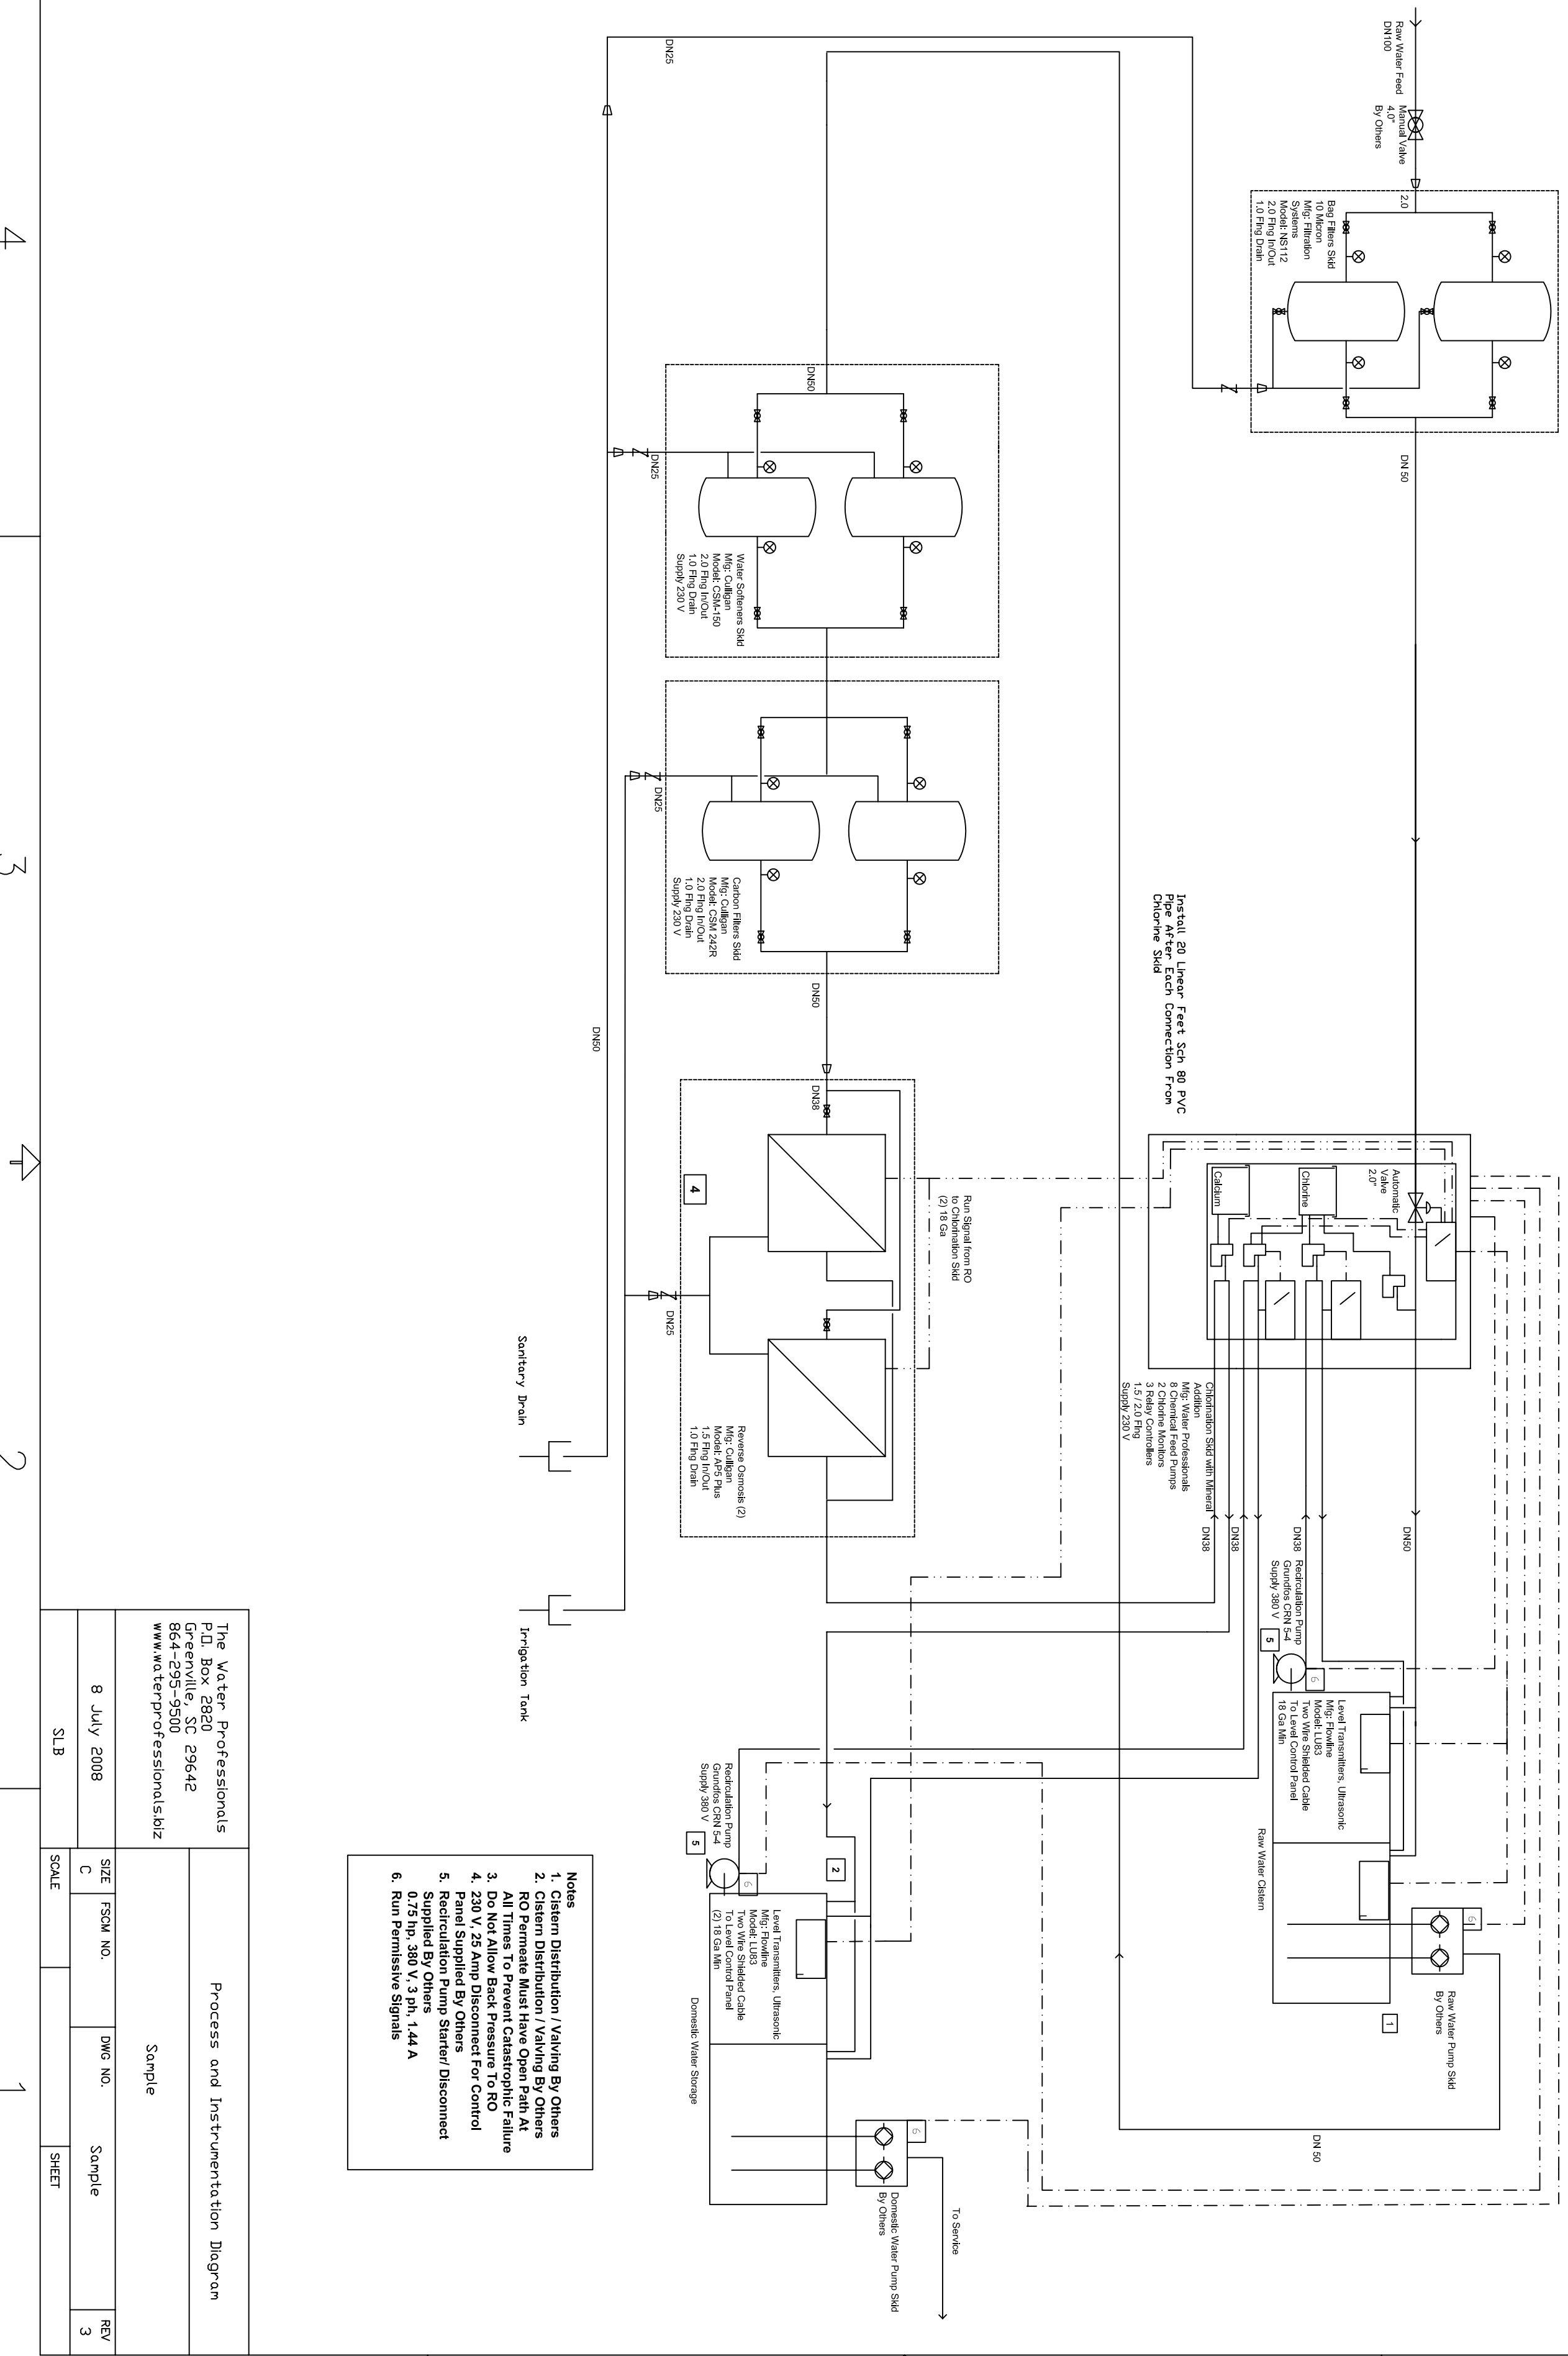

Install 20 Linear Feet Sch 80 PVC Pipe After Each Connection From Chlorine SSKD

Chlorination SSKD with Mineral Addition
Mfg: Water Professionals
Model: URS
2 Chlorine Monitors
3 Relay Controllers
Supply: 230 V 1.5 / 2.0 Fmg

Raw Water Cistern

Raw Water Pump SSKD
By Others

Domestic Water Pump SSKD
By Others

- Notes**
1. Cistern Distribution / Valving By Others
 2. Cistern Distribution / Valving By Others
 3. RO Permeate Must Have Open Path At All Times To Prevent Catastrophic Failure
 4. Do Not Allow Back Pressure To RO Panel Supplied By Others
 5. Recirculation Pump Starter/ Disconnect Supplied By Others
 6. Run Permissive Signals

The Water Professionals
P.O. Box 2820
Greenville, SC 29642
864-295-9500
www.waterprofessionals.biz

Process and Instrumentation Diagram

8 July 2008	SIZE	FSCM NO.	DWG NO.	Sample	REV
SL B	C			Sample	3
	SCALE			SHEET	

A

B

C

D

A

B

C

D

4

3

2

1